

Prep for Moving OneRev Through 72 Inch Doorway

With temporary caster installation instructions



Rotating Oven

Gas-Fired

ONEREV WS-RV-7880



WOOD STONE CORPORATION

1801 W. Bakerview Rd. Bellingham, WA 98226 USA Toll Free 800.988.8103 Tel 360.650.1111 Fax 360.650.1166

www.woodstone-corp.com

REVISED AUGUST 2024



OneRev Oven OneRev 72 Inch Doorway Kit



PURPOSE OF THESE INSTRUCTIONS

These instructions show how to remove protruding components from the front of the oven and install temporary casters that will allow you to roll the oven through a 72" opening.



TOOLS NEEDED

7/16 Nut Driver
7/16 deep well socket or socket with extension
Phillips Head Screw Driver
7/16 Wrench


PARTS NEEDED

Caster Kit

Be sure to retain all hardware that is removed as it will be used for reinstalling components.

1: REMOVE THE LOGO PANEL

Lift it up and toward yourself.

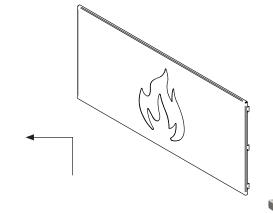

2: REMOVE THE DEBRIS MANTEL

Remove the crumb tray and cover plate (by lifting it up and pulling toward yourself) and set them aside.





WOOD (STON



OneRev Oven OneRev 72 Inch Doorway Kit




REMOVE DEBRIS MANTEL (CONTINUED)

Use a Phillips head driver to remove the two screws holding the cowling in place.

Undo the four bolts on the left and right of the debris mantel. Be mindful of the washer on each bolt.


Remove the debris mantel assembly and set it aside.



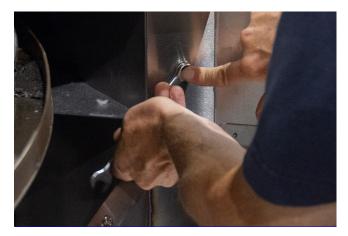





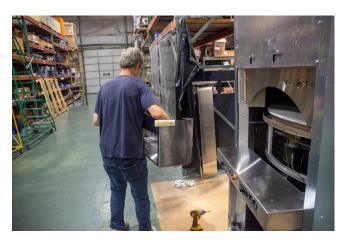



OneRev Oven OneRev 72 Inch Doorway Kit



3: REMOVE CONTROL UNIT COVER PLATE

Unscrew the Phillips head screws holding the metal cover plate on the control panel and lower it away.












OneRev Oven OneRev 72 Inch Doorway Kit



4: REMOVE CONTROL UNIT

Undo the bolts holding the control unit. Keep electrical connections. Place the unit inside the oven.

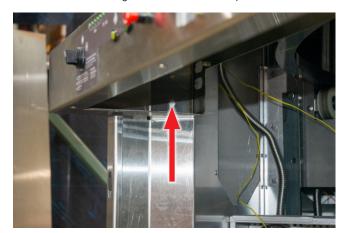







5: REMOVE THREE PIECES OF COMBING

Sides and bottom. Remove #3 Phillips screws and remove the combing.









OneRev Oven OneRev 72 Inch Doorway Kit



6: INSTALL CASTERS

IMPORTANT: Using a pallet jack or forklift, lift the oven up and slide two two-by-fours, the length of the oven, underneath the left and right sides of the oven. Lower the oven onto the two-by-fours. **DO NOT install the casters while the oven is lifted by any other means.**

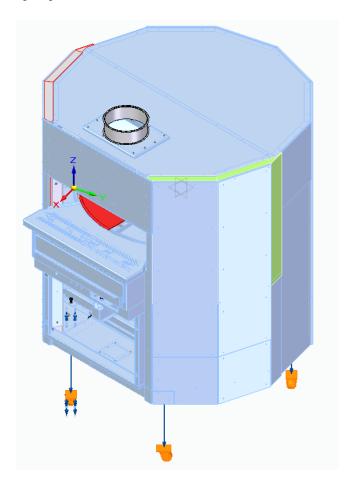

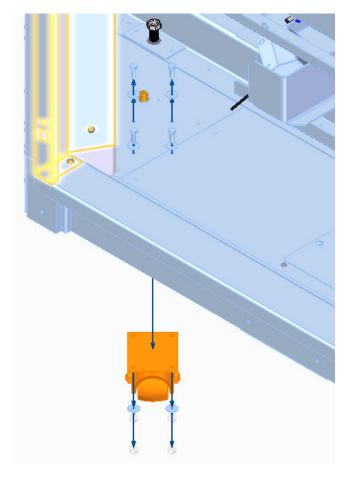

Mount the casters on the fork tubes leaving the pallet fork tubes open.

Insert the four 1" long $\frac{1}{4}$ -20 bolts from the underside. The washers go on top and bottom. Secure with nut and tighten appropriately.



OneRev Oven OneRev 72 Inch Doorway Kit



INSTALL CASTERS (CONTINUED)

Caster placement.

