

Installation and Operation Manual



GAS PLANCHA

Speciality Equipment

*Countertop Model
and Optional Stand Models*

4-ZONE GAS PLANCHA WS-GPL-4836-CT01

WoodStone

WOOD STONE CORPORATION

1801 W. Bakerview Rd.
Bellingham, WA 98226 USA

Toll Free 800.988.8103

Tel 360.650.1111

Fax 360.650.1166



TABLE OF CONTENTS

Wood Stone Gas Plancha 3
Cautions & Warnings 4
WS-GPL-4836-CT01 Specs 5
WS-GPL-4836-CT01 Specs w/ Stand 6
Clearances. 7
Utility Specifications 8
Basic Operation. 9
Daily Use & Maintenance 10
Troubleshooting. 11
Operational Sequence. 12

WIRE DIAGRAMS

Ignition Module Interconnect Harness - W6 . . . 13
Ignition & Power Distribution 14
Indicators & Potentiometers 15
Thermocouple Connections 16
Limited Warranty 17



INSTALLATION AND OPERATION MANUAL WOOD STONE GAS PLANCHA

WS-GPL-4836-CT01

WS-GPL-4836-CT01 w/ OPTIONAL STAND

ADDITIONAL COPIES AVAILABLE UPON REQUEST



WS-GPL-4836-CT01



WS-GPL-4836-CT01
Shown with optional stand



WOOD STONE GAS PLANCHA INSTALLATION AND OPERATION INSTRUCTIONS

RETAIN THIS MANUAL FOR FUTURE REFERENCE

Additional copies of this manual at woodstone-corp.com.

For prompt responses to service/maintenance questions, call us at @ 1-800-988-8103.

IMPORTANT: Consult your local gas supplier for a statement outlining a procedure to be followed in the event you smell gas. Post the statement in a prominent location.

FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

ESURE DE SÉCURITÉ: Ne pas entreposer ni utiliser de essence ni autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

IMPORTANT: It is recommended this equipment be installed, maintained and serviced by authorized professionals.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

AVERTISSEMENT: L'installation, le réglage, la modification, la réparation ou l'entretien incorrect de cet appareil peut causer des dommages matériels, des blessures ou la mort. Lire attentivement les instructions d'installation, de fonctionnement et d'entretien avant de procéder à son installation ou entretien.



IF THIS EQUIPMENT IS NOT PROPERLY INSTALLED A FIRE MAY RESULT. TO REDUCE THE RISK OF FIRE, FOLLOW THESE INSTALLATION INSTRUCTIONS. A MAJOR CAUSE OF APPLIANCE-RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS APPLIANCE BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.

Please read this entire manual before you install the appliance. Failure to follow instructions may result in property damage, bodily injury or even death. Contact your local building or fire officials about restrictions and installation inspection in your area.

This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts.

DO NOT THROW THIS MANUAL AWAY



Intertek
ANSI Z83.11:2016 Ed.4
CSA 1.8:2016 Ed.4




Intertek
ANSI/NSF STD 4

Wood Stone's Gas Plancha has been tested and approved by Intertek, and is ETL listed to ANSI Z83.11:2016, CSA 1.8:2016 Ed. 4 and to NSF/ANSI 4:2016




WS-GPL-4836-CT01 COUNTERTOP MODEL


Plan view

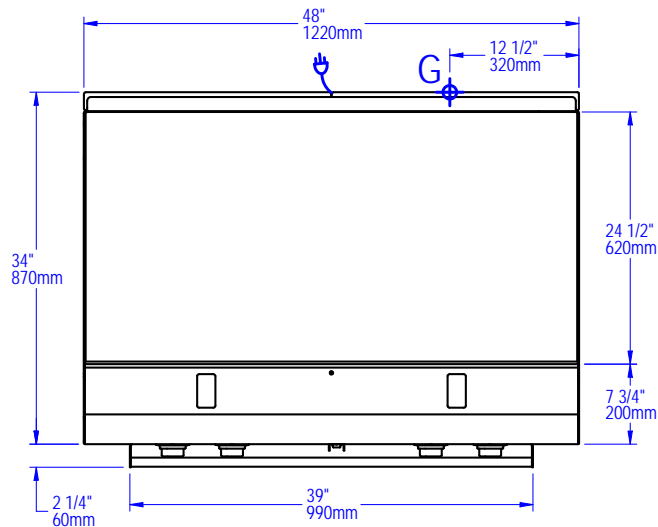

Front view

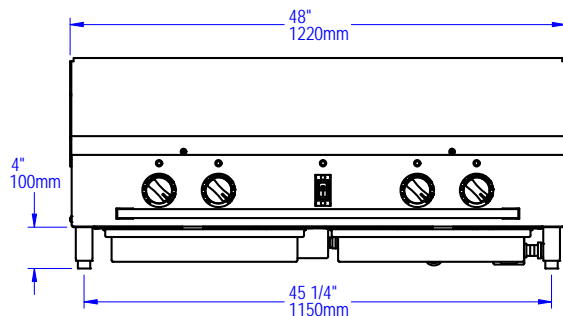

Side view

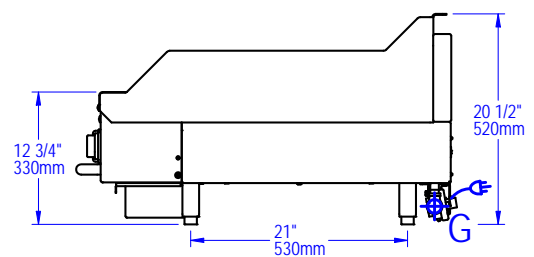

Shipping weight: 580 lbs Unit weight: 484 lbs

UTILITIES SPECIFICATIONS

Gas: 3/4 inch FNPT gas inlet $\oplus G$
110,000 BTU/hr Natural Gas (NG)
OR
118,000 BTU/hr Propane (LP)
Maximum gas inlet pressure
1/2 psi (14 inches W.C.)

Electrical $\oplus E$
120 VAC, .7 A, 50/60 Hz
Equipped with a NEMA 5-15P plug
for use with a standard 120 VAC
15 A or 20 A outlet.
Refer to data plate when installing.


Venting

The Wood Stone Gas Plancha must be vented with a Listed Type 1 exhaust hood, or one constructed in accordance with NFPA 96 and all relevant local and national codes. The oven must be vented in accordance with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.




WS-GPL-4836-CT01 OPTIONAL STAND MODEL


Plan view

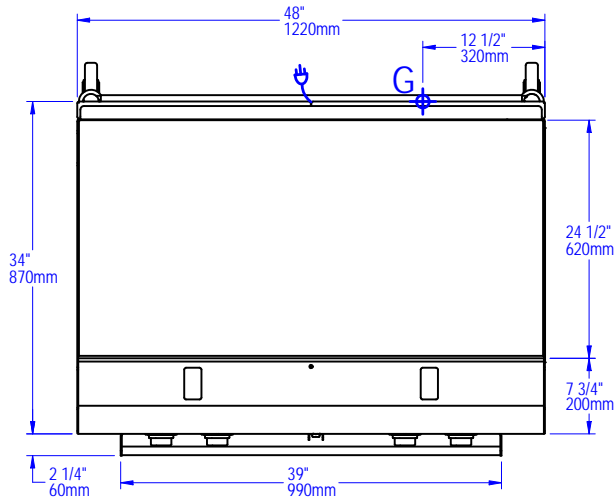

Front view

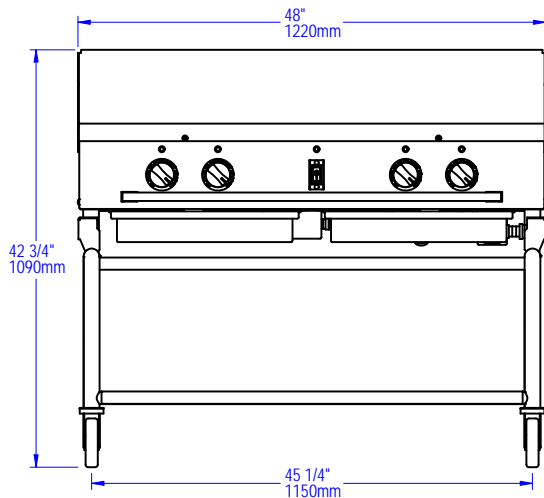

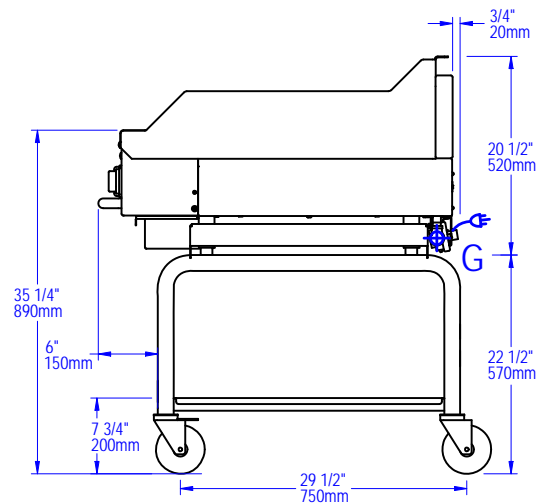

Side view



Shipping weight: 660 lbs. Unit weight: 550 lbs.

UTILITIES SPECIFICATIONS

Gas: 3/4 inch FNPT gas inlet 
110,000 BTU/hr Natural Gas (NG)
OR
118,000 BTU/hr Propane (LP)
Maximum gas inlet pressure
1/2 psi (14 inches W.C.)

Electrical 
120 VAC, .7 A, 50/60 Hz
Equipped with a NEMA 5-15P plug
for use with a standard 120 VAC
15 A or 20 A outlet.
Refer to data plate when installing.

Venting

The Wood Stone Gas Plancha must be vented with a Listed Type 1 exhaust hood, or one constructed in accordance with NFPA 96 and all relevant local and national codes. The oven must be vented in accordance with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.



CLEARANCES

1. The Wood Stone Gas Plancha must have a **minimum 12 inch clearance to combustible construction from sides and back, and 0 inch clearance to non-combustible construction from sides and back.**
2. This appliance may be installed on a combustible or non-combustible surface.
3. **Combustion air:** Combustion air flows into the Plancha through vents in the bottom panel. The Plancha must be installed with the legs provided. **Do not block** the space between the appliance and the countertop.



IF THIS EQUIPMENT IS NOT PROPERLY INSTALLED A FIRE MAY RESULT. TO REDUCE THE RISK OF FIRE, FOLLOW THESE INSTALLATION INSTRUCTIONS. A MAJOR CAUSE OF APPLIANCE-RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS APPLIANCE BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.



GAS INFORMATION:

The Wood Stone Gas Plancha is equipped with a 3/4 inch FNPT gas connection located at the rear of the appliance. The installer should provide an appropriate quick disconnect fitting for connection to the gas supply.

BURNER MANIFOLD PRESSURE

Model	Natural Gas (NG) model	Propane (LP) model
WS-GPL-4836-CT01	4.0" W.C.	9.0" W.C.

BTU/HR INPUT RATE

Model	Natural Gas (NG) model	Propane (LP) model
WS-GPL-4836-CT01	110,000 BTU/hr	118,000 BTU/hr

The Plancha is equipped with a gas pressure regulator that is preset at the factory. This regulator comes installed on the rear of the unit. If incoming gas pressure is less than 1/2 psi (14 inches W.C.), no additional regulator is required or recommended. If incoming gas pressure is greater than 1/2 psi, an additional regulator, by others, must be installed on the gas line serving the appliance. Do not remove the factory supplied regulator.

If you must convert the Plancha to run on a different gas type, i.e. NG to LP, please contact Wood Stone to obtain the necessary parts and instructions.

No modification is required for use at high altitudes.

ELECTRICAL RATINGS

The Plancha is equipped with a NEMA 5-15P plug for use with a standard 120 VAC 15 A or 20 A outlet.

Model	Voltage	Amperage
WS-GPL-4836-CT01	120 VAC	0.7 A

Electrical Grounding: This appliance must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical code, ANSI/NFPA 70 or the Canadian Electrical Code, CSA C22.1 as applicable.

ELECTRICAL SUPPLY CORD AND GAS CONNECTION SHOULD BE ROUTED SO THAT THEY ARE NOT SUBJECTED TO THE HEAT COMING FROM THE PLANCHA COOKING SURFACE.

VENTILATION

The Wood Stone Gas Plancha must be vented with a Listed Type 1 Exhaust Hood, or one constructed in accordance with NFPA 96 and all relevant local and national codes. The oven must be vented in accordance with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.



CLEAN THOROUGHLY BEFORE FIRST USE

A vegetable oil cooking spray is applied to the cook surface at the factory to help protect from corrosion during shipping. The cook surface must be thoroughly cleaned before use. Follow these instructions:

1. Make sure the Grease/Debris Trays are in place.
2. Turn the Plancha ON and allow to heat for 5 minutes. Then turn the Plancha OFF and wait for 5 minutes.
3. Wipe the cook surface using a wet towel, dampened with a small amount of water and a mild dish detergent. Then rinse with a towel dampened with clean water 3-4 times. Wipe the surface down with a dry towel and the Plancha is ready for service.

CAUTION: THE COOKING SURFACE WILL BE HOT! USE CAUTION WHEN WIPING SURFACE, PAYING PARTICULAR ATTENTION TO AVOID STEAM FROM DAMP TOWELS.

BASIC OPERATION

Use the Power Switch on the Front Panel to turn ON the Plancha. The switch will illuminate Green. This appliance utilizes an automatic ignition system. **Note:** There are NO standing pilots to manually light. Press the Power Switch to the OFF position to turn OFF the Plancha.

At start-up, the red Fault Light on the front panel will illuminate for a few seconds when the unit is first switched ON. The purpose is to allow the operator to confirm the light is functional. If the red light comes on any other time in the operation of the unit, turn the Power Switch to the OFF position, wait 5 minutes, then restart the Plancha. Notice if the red light is on steady or is blinking, as this will be useful information if service is called.

When the Plancha is first turned ON, the Heat Indicator Light for each zone will be illuminated until its zone reaches the temperature set on the Temperature Control Knob. The green Heat Indicator Lights in each zone correspond to the burner state of each zone. If the light is on, the burner should be on.

The Plancha Controller automatically adjusts the runtime of the burners supplying heat to each zone to maintain the set point temperature.

WS-GPL-4836-CT01





DAILY USE AND MAINTENANCE

1. Check and empty the Grease/Debris Trays frequently throughout the day. Keep the drain clear and do not allow the trays to overflow.

2. The cooking surface should be scraped frequently throughout the day using a grill scraper.

CAUTION: COOK SURFACE IS VERY HOT!

3. When using chemicals to clean the grill surface, first shut down the Plancha and allow it to cool. If the Plancha is too hot, the chemical may tend to boil or burn off immediately and not work as effectively. Do not pour water onto a hot Plancha to cool it as this can warp the cook surface. If using chemical grill cleaners, follow the instructions provided with that product.

DO NOT USE EXCESSIVE AMOUNTS OF WATER TO CLEAN THE PLANCHA. Be careful when using scrapers on the cook surface to avoid scratching or gouging the top. Be aware that the cook surface is made of mild steel—it will not clean to a shiny silver-like surface. Do not use heavy duty degreasers or oven cleaners on the Plancha as these are not generally intended for use on hot surfaces.

Never use a grill cleaning brick in the area of the rear exhaust flues, as dust and debris from the grill brick can enter the flues and damage the plancha burners.

NOTE: Damage caused by using spray hoses or excessive water, or scratching or marring of the cook surface, is not covered by the warranty.

4. The front, sides and back may be wiped down with a cloth and mild detergent if needed. Do not use abrasive cleaners or scouring pads as these will scratch the stainless steel.


5. Take care to avoid getting debris and liquids into the exhaust flues at the rear of the Plancha, as this can damage the burners. The flues are easily removable for cleaning. They should be inspected daily and cleaned as necessary.

NOTE: The Plancha must be turned OFF before removing the flues. NEVER run the Plancha with the flues removed. Do not touch, or attempt to clean the burners.

CAUTION: FLUES ARE VERY HOT!



PROBLEM	CAUSE/SOLUTION
Plancha will not turn ON. No indicator light on ON/OFF switch	<ol style="list-style-type: none"> 1. Check that Plancha is plugged in, and that circuit breaker for the circuit serving the Plancha has not tripped. Power for the Plancha may be interlocked to the ventilation system—make sure the Exhaust Hood system is turned ON. 2. Try connecting unit to a different outlet. 3. If Plancha still does not turn ON, please contact Wood Stone for assistance.
Red Fault light stays on after the first few seconds	<ol style="list-style-type: none"> 1. Check that gas line is connected by disconnecting and reconnecting the gas line, and that all gas shutoffs are in the open position. Gas supply may be interlocked to the ventilation system —make sure Exhaust Hood is turned on. To retry, turn off Plancha, wait 5 minutes, then turn back ON. 2. If the Plancha is being started for the first time: Make sure all air has been bled from the gas line.
Grill is not cooking consistently	<ol style="list-style-type: none"> 1. Determine the cooking surface temperature, using the Surface Temperature Measurement Procedure below. 2. If any reading is outside the acceptable temperature range, call Wood Stone.

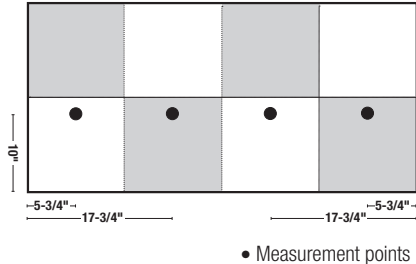

SURFACE TEMPERATURE MEASUREMENT PROCEDURE

1. Carefully verify all Temperature Knobs are set exactly at the same temperature. Make certain grill surface is clean.
2. **From a cold start:** Turn on the Plancha and wait at least 60 minutes before taking temperature measurements.


If Plancha is heated up / in use: Allow 15 minutes of inactivity to stabilize after last cooking run. Make certain grill surface is clean.

3. Using a surface probe intended for griddles, condition the test probe before each measurement by placing it on the cook surface, away from the Measurement Point (•). Once the reading has stabilized, THEN slide the probe over the Measurement Point. Wait for Heat Indicator Light to cycle OFF, then note temperature.
4. Temperature reading at each point should be within the range +/-15 °F of the Set Point. If the temperature reading is outside of the +/-15 °F range, wait for the green Heat Indicator Light to come on again and recheck the temperature. If the temperature is still out of range, contact Wood Stone.

Please contact Wood Stone at 1-800-988-8103 should service be necessary, or if you have any questions about your Plancha. Our service hours are 8am to 5pm Pacific Time. Follow the recorded instructions for Emergency Service if you require assistance during non-business hours. A Wood Stone technician will promptly respond to your call.



SEQUENCE OF OPERATION

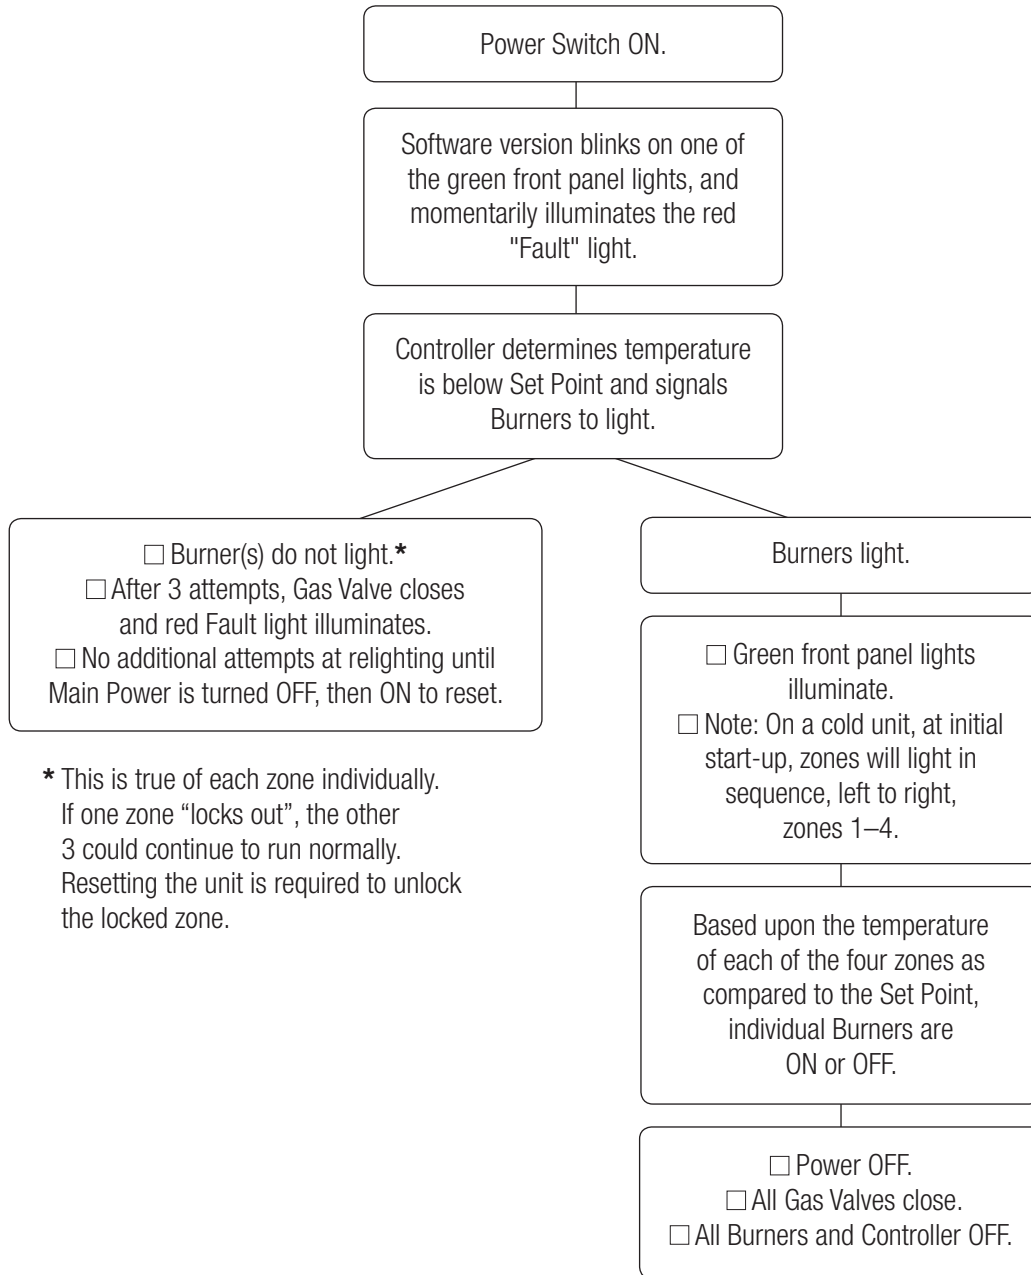




IGNITION MODULE INTERCONNECT HARNESS - W6

Sheet: 1 of 4

DIAG #: WD410 Rev. 0
DATE: 6/22/2017

WS-GPL-4836 Gas Plancha - 4 Knob Ignition Module Interconnect Harness - W6

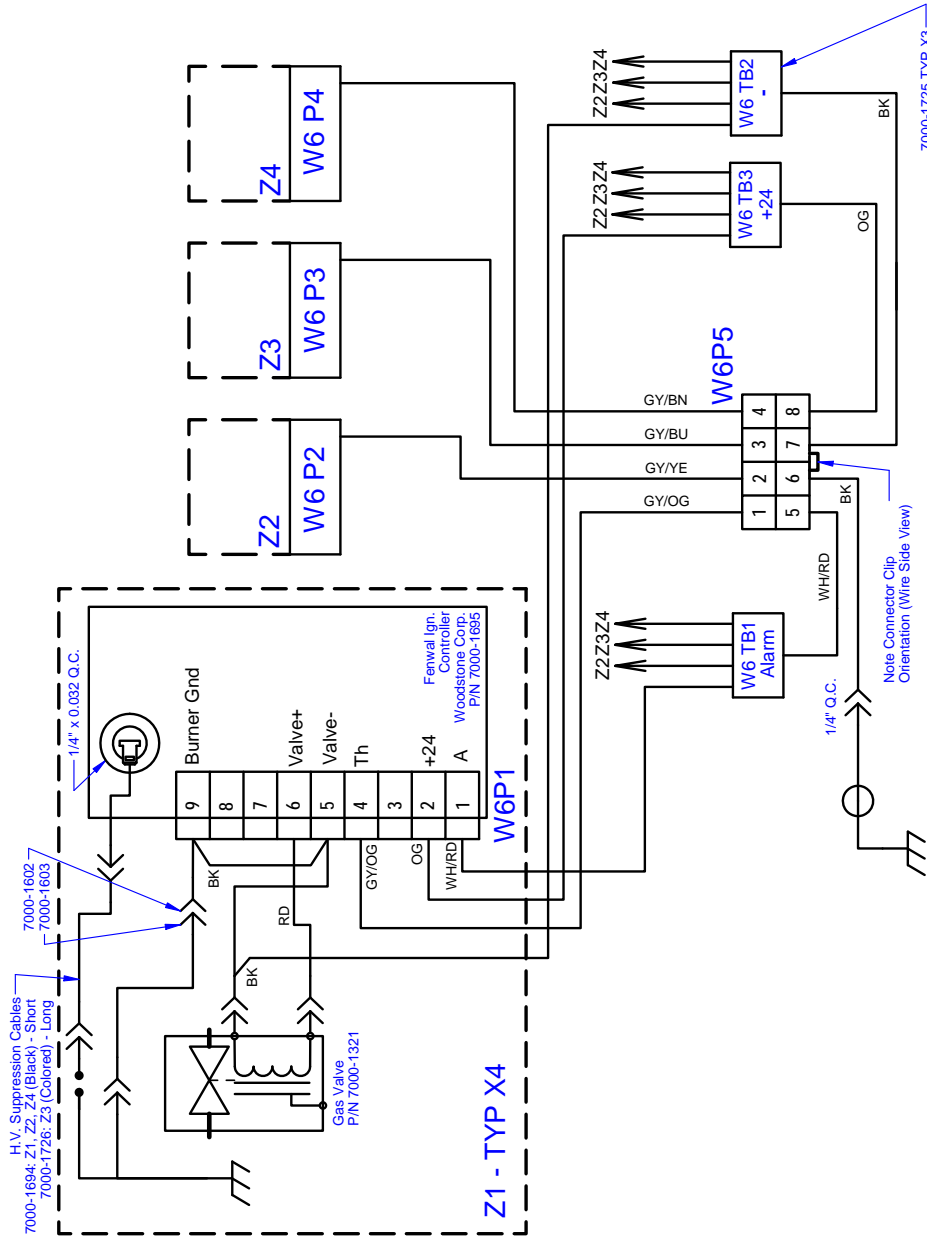




IGNITION AND POWER DISTRIBUTION

Sheet: 2 of 4

DIAG #: WD410 Rev. 0
DATE: 6/22/2017

WS-GPL-4836 Gas Plancha - 4 Knob Ignition and Power Distribution

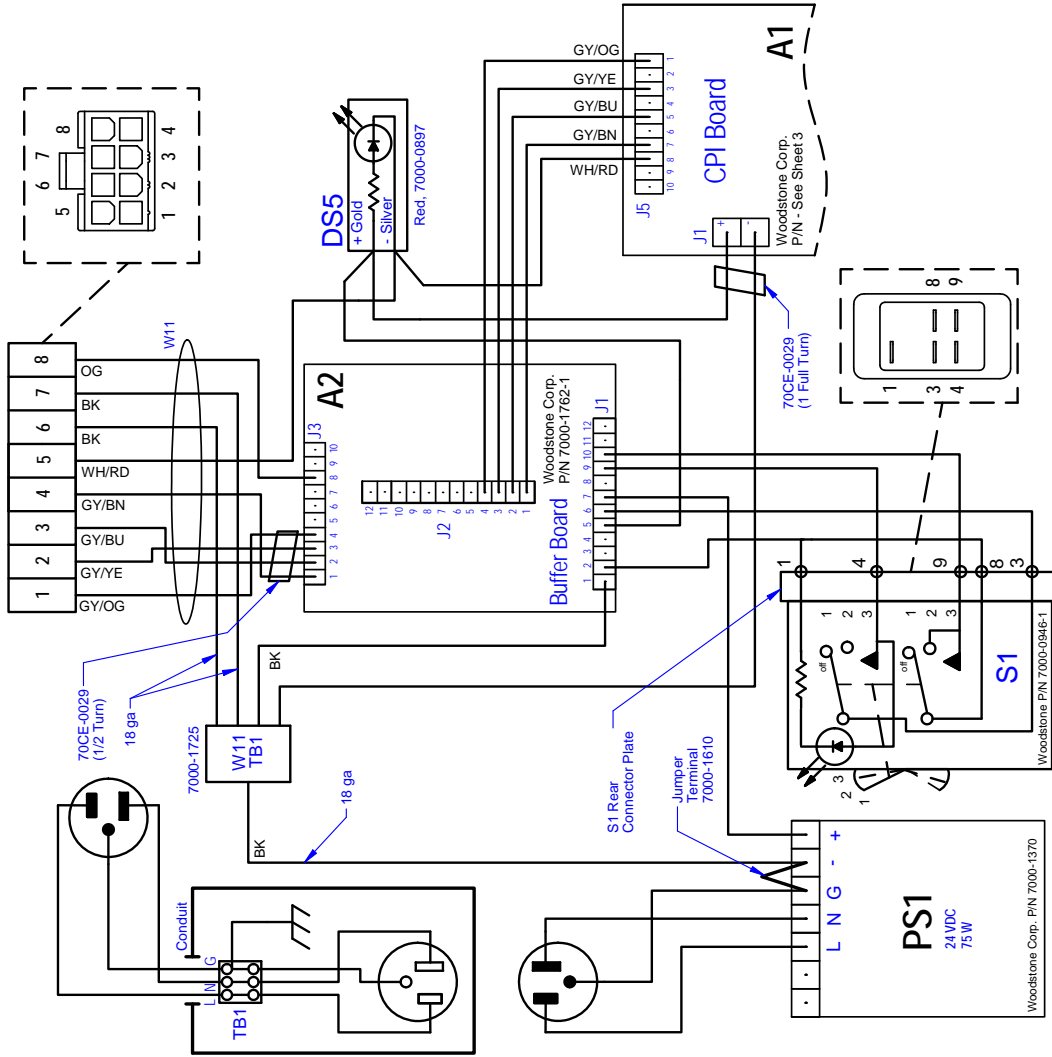




INDICATORS AND POTENTIOMETERS

Sheet: 3 of 4

WS-GPL-4836 Gas Plancha - 4 Knob Indicators and Potentiometers

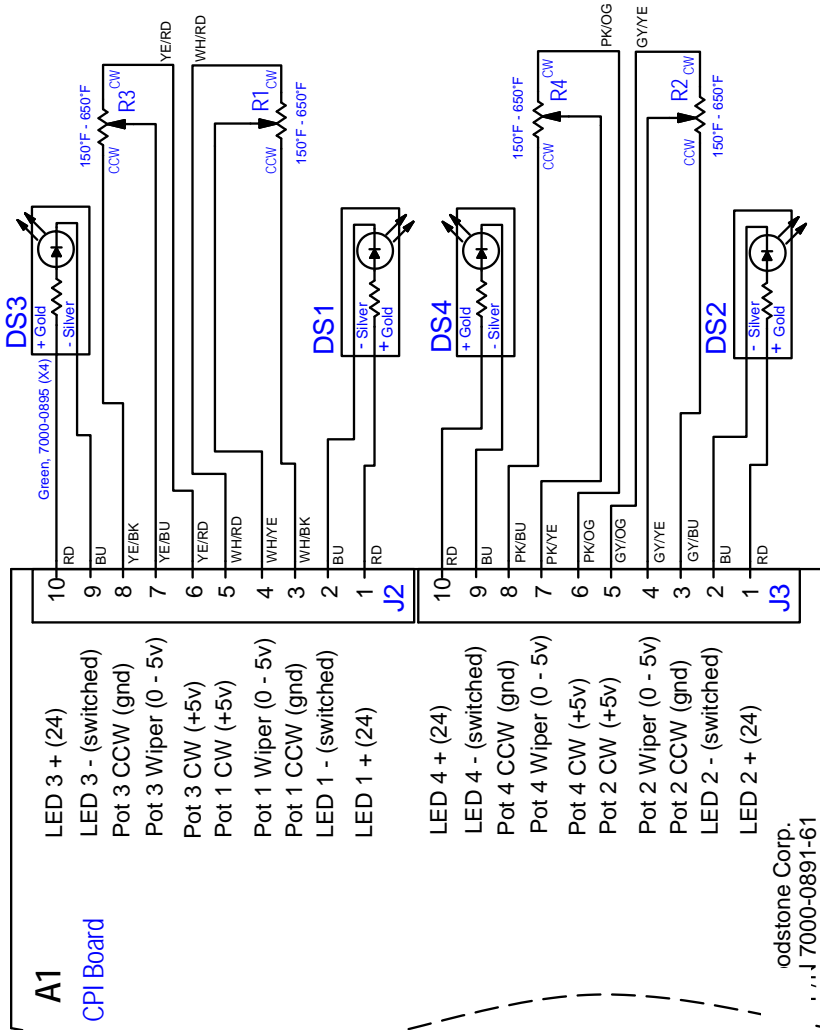


DIAG #: WD410 Rev. 0
DATE: 6/22/2017



THERMOCOUPLE CONNECTIONS

Sheet: 4 of 4

WS-GPL-4836
Gas Plancha - 4 Knob
Thermocouple Connectors

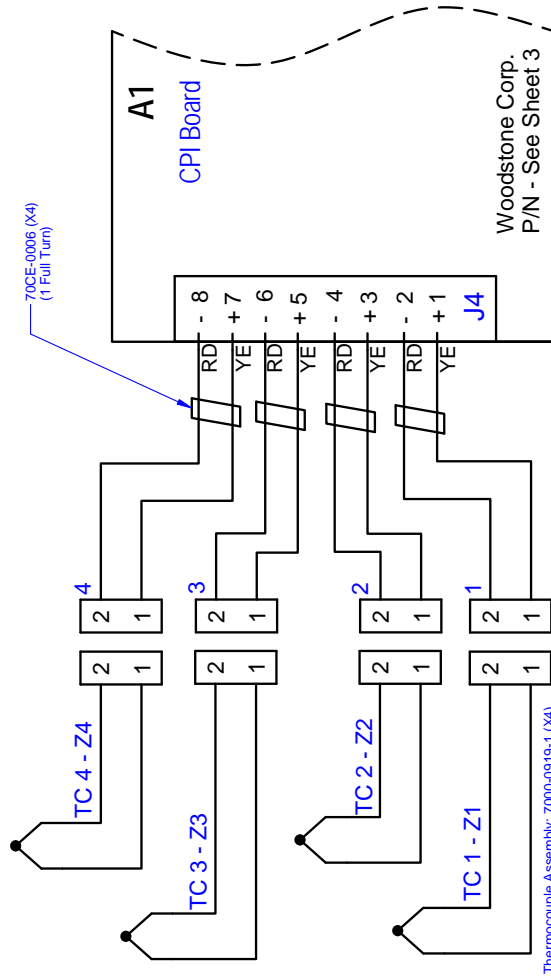

Thermocouple Assembly: 7000-0919-1 (X4)

DIAG#: WD410 Rev. 0
DATE: 6/22/2017

**ALL WARRANTY SERVICE MUST BE PRE-APPROVED BY WOOD STONE
PLEASE CONTACT THE FACTORY FIRST**

Please call 1-800-988-8103 or 1-360-650-1111 seven days a week. Our normal service hours are 8 am to 5 pm Pacific time Monday through Friday. If calling during non-business hours, follow the recorded instructions for emergency service and a Wood Stone technician will get back to you promptly. Wood Stone warrants its equipment to the original purchaser against defects in material or manufacture for a period of one year from the original date of purchase subject to the following exclusions and limitations.

EXCLUSIONS:

The warranties provided by Wood Stone do not apply in the following instances:

1. In the event that the equipment is improperly installed. Proper installation is the responsibility of the installer; proper installation procedures are prescribed by the Wood Stone installation manual.
2. In the event the equipment is improperly maintained. Proper maintenance is the responsibility of the user; proper maintenance procedures are prescribed in the Wood Stone installation manual.
3. In the event that the failure or malfunction of the appliance or any part thereof is caused by abnormal or improper use or is otherwise not attributable to defect in material or manufacture.
4. In the event that the appliance, by whatever cause, has been materially altered from the condition in which it left the factory.
5. In the event that the rating plate has been removed, altered or obliterated.
6. On parts that would be normally worn or replaced under normal conditions.
7. Scratches or damage to the grill surface due to improper cleaning or normal wear and tear.

If any oral statements have been made regarding this appliance, such statements do not constitute warranties and are not part of the contract of sale. This Limited Warranty constitutes the complete, final and exclusive statement with regard to warranties.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR WARRANTY AGAINST LATENT DEFECTS

LIMITATIONS OF LIABILITY

In the event of warranty claim or otherwise, the sole obligation of Wood Stone shall be the repair and/or replacement, at the option of Wood Stone, of the appliance or component or part thereof. Such repair or replacement shall be at the expense of Wood Stone with the exception of travel over 100 miles or two hours, overtime, and holiday charges which shall be at the expense of the purchaser. Any repair or replacement under this warranty does not constitute an extension of the original warranty for any period of the appliance or for any component or part thereof. Parts to be replaced under this warranty will be repaired or replaced at the option of Wood Stone with new or functionally operative parts. The liability of Wood Stone on any claim of any kind, including claims based on warranty, expressed or implied, contract, negligence, strict liability or any other theories shall be solely and exclusively the repair or replacement of the product as stated herein, and such liability shall not include, and purchaser specifically renounces any rights to recover, special, incidental, consequential or other damages of any kind whatsoever, including, but not limited to, injuries to persons or damage to property, loss of profits or anticipated profits, or loss of use of the product.

TO SECURE WARRANTY SERVICE

If you claim a defect covered by this Limited Warranty, direct your claim to:

Wood Stone Corporation 1801 W. Bakerview Rd. Bellingham, WA 98226 USA Attn: Global Service Manager

Left blank, with intention.

Left blank, with intention.



WOOD STONE CORPORATION

1801 W. Bakerview Rd.
Bellingham, WA 98226 USA

Toll Free 800.988.8103

Tel 360.650.1111

Fax 360.650.1166

www.woodstone-corp.com

An ongoing program of product improvement may require us to change specifications without notice.